


INSTRUCTIONS MANUAL

Version 001-23
ORIGINAL INSTRUCTIONS

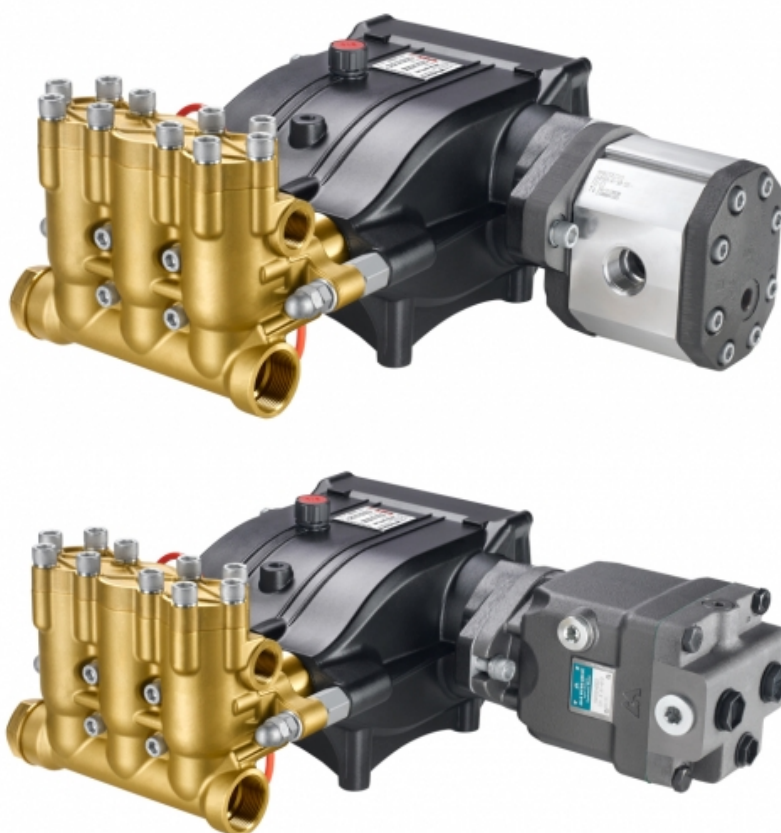

HYDRAULIC MOTOR PUMPS

LEUCO S.p.A.

Via Colletta, 20
42124 Reggio Emilia (RE) - ITALY
Tel. 0522/923011 Fax 0522/923030

This manual and associated information can be downloaded from the website:
<http://www.hawkpumps.com/it/>

CONTENTS

1	GENERAL INFORMATION	3
1.1	Structure of the Manual	3
1.1.1	Aim and contents	3
1.1.2	Intended recipients / Definitions	3
1.1.3	Storage	4
1.1.4	Symbols used in the manual	4
1.2	Manufacturer	4
1.3	Service Centres	4
1.4	EC Mark and Certification - Declaration of Incorporation	5
1.5	Guarantee	5
2	GENERAL DESCRIPTION	6
2.1	Main parts	7
2.1.1	Technical characteristics	8
2.2	Local conditions	11
2.3	Vibration	11
2.4	Noise	11
2.5	High temperatures	11
2.6	Stability	11
2.7	Pressurised liquids	11
3	SAFETY	12
3.1	General safety instructions	12
3.2	Residual risks	13
3.3	Personal protective equipment	13
3.4	Working safely	14
3.4.1	Safety when using the hydraulic motor pump	14
3.4.2	Safety of the high-pressure circuit on the hydraulic motor	14
3.4.3	Rules of conduct regarding the use of high pressure lance	14
3.5	Safety during lifting and handling	15
3.5.1	Packing, unpacking and transport	15
3.6	Safety during Maintenance	16
3.7	Products used	16
3.8	Product labels	17
3.9	First Aid	18
3.9.1	What the First Aider does	18
3.9.2	The Emergency Call	18
3.9.3	Injuries	18
3.9.4	Bleeding	18
4	INTENDED USE	19
4.1	Intended use	19
4.2	Improper uses	19
5	INSTALLATION AND ASSEMBLY	20
5.1	Responsibilities of the Customer/User	21
5.2	Pre-commissioning instructions	22
5.3	Long periods of inactivity	23
5.4	Operation	24
6	MAINTENANCE	29
6.1	General maintenance	30
7	TROUBLESHOOTING	31
7.1	Troubleshooting	31
8	DISMANTLING AND DISPOSAL	32
9	SPARE PARTS	33
10	ATTACHMENTS	33

1 GENERAL INFORMATION

1.1 Structure of the Manual

This manual is an integral part of the official documents provided with the pump and **hydraulic motor** (*Hydraulic motor pump*). It is written by the Manufacturer and provides the operating instructions and criteria to be followed for the installation, use and maintenance of the **hydraulic motor pump**.

Before choosing and/or using any LEUCO product, it is important that the customer controls all aspects related to its specific application with due care and studies the information provided in the technical sales literature published by LEUCO. As LEUCO products may be used in different operating conditions and/or applications, the customer is responsible for carrying out any tests and analysis that will help him choose the best product for his needs. He is also responsible for complying with all operating specifications and safety requisites.

LEUCO's products and publications are subject to change at any time without notice.

The customer must ensure the installation is carried out in full compliance with the instructions provided in this manual, as well as with current national legislation and standards.

The Manufacturer is not liable for any damages caused by incorrect use, negligence, superficial interpretation or total lack of application of the safety related information provided in this manual.

1.1.1 Aim and contents

These operating instructions provide all the information concerning the installation, use, maintenance, storage and all stages of the life cycle of the high-pressure positive displacement piston pumps to be observed by any persons involved in its assembly/end user in order to prevent possible risks.

Operators and qualified technicians must read the instructions in this publication with due care before starting any operation on the equipment.

Contact LEUCO S.p.A for the necessary explanations if you have any doubts regarding the correct meaning of the instructions.

1.1.2 Intended recipients / Definitions

These instructions are intended for skilled personnel who have been given appropriate training for carrying out installation and routine maintenance.

Customer

The person, public agency or private company who bought the pump and intends to use for its intended purposes. This may also be the person responsible for its assembly provided he has the necessary requisites.

User/Operator

An authorised person with the requisites, skills and information needed to use the **hydraulic motor pump**, machine or system where the pump is fitted, and to carry out routine maintenance.

Ordinary/general maintenance

The actions required to maintain the machine in good working order, to guarantee a longer working life and to safeguard safety requisites at all times. The Manufacturer has provided a description of the maintenance schedule and methods in this manual. Maintenance may be carried out by qualified personnel, including the operator, as described above.

Supplementary maintenance

The actions required to restore the working order and efficiency of the machine. Such actions are required in case of sudden anomaly and may only be carried out by a specialised technician.

Installer/Assembler

An authorised technician with the specific requisites and skills needed to carry out the actions needed to install the **hydraulic motor pump** and/or similar machines and to carry out routine maintenance in complete safety, independently and without incurring risks.

Training

The period when the operators are given the necessary instructions to carry out any actions in a correct and risk free manner..




Person at risk





Any person finding themselves totally or partly in a danger zone.

1.1.3 Storage


This instructions manual should be kept in the direct vicinity of the machine, in a specific container, protected from contact with liquids and any other substance that could render it illegible.

1.1.4 1.1.4 Symbols used in the manual

SYMBOL	MEANING	COMMENT
	DANGER	Indicates a potentially serious risk for the user/assembler.
	CRUSHING HAZARD FOR UPPER AND LOWER LIMBS	Indicates the danger of crushing the upper limbs when positioning or handling the pump.
	MOVING MECHANICAL PARTS HAZARD	Indicates a hazard due to the presence of moving parts (such as drive shafts or reduction units).

SYMBOL	MEANING	COMMENT
	WARNING	A warning or note regarding key features or useful information. Pay maximum attention to the text boxes indicated by these symbols.
	SAFETY INFORMATION	
	REFERENCE	Refer to the instructions manual before attempting any action.
	ADJUSTMENTS/MAINTENANCE	Specific mechanical adjustment and/or electrical calibration (when applicable) may be necessary in cases of special operating modes and/or anomalies.

1.2 Manufacturer

	LEUCO S.p.A. Via Colletta, 20 - 42124 Reggio Emilia (RE) - ITALY
---	--

1.3 Service Centres

Contact LEUCO S.p.A. or specialised personnel authorised by the Manufacturer for further information relating to operation or maintenance.

Make a note of the information you will find on the [hydraulic motor pumps](#)' specifications plate and the type of fault found whenever requesting technical assistance.

1.4 EC Mark and Certification - Declaration of Incorporation

The Hawk [hydraulic motor pumps](#) described in this manual are manufactured in compliance with Directive 2006/42/CE and European Community Directives that are pertinent and applicable at the time they are sold. As they are "partly completed machinery", according to Article 2, letter g) of the above Directive, a Declaration of Incorporation is issued in place of a certification. As its contents make clear, the final Installer is responsible for issuing the declaration of conformity and relative CE mark (which may be the same person as the Customer).

These assembly instructions were drafted in accordance with Annex VI of the above Directive.

This instructions manual complies with Annex I section 1.7.4 of the above Directive as well as UNI 10893 standard and ISO/IEC 37 guidelines.



The list of Directives and the standards applied can be found in the Declaration of Incorporation in the attachments (Attachment I) of this Manual.

1.5 Guarantee

LEUCO S.p.A. guarantees HAWK products from defects in their construction and materials for a period of (1) year from the time they left the factory.

This guarantee is limited to the repair and replacement of parts or products that LEUCO S.p.A. deems were defective at the time of delivery. All the products covered by this limited guarantee must be returned freight paid for inspection, repair or replacement by the manufacturer.

This limited warranty is the only form of valid guarantee and replaces any other form of explicit or implicit warranty, including any guarantee of fitness for sale or any particular purpose. The manufacturer refuses any such liability with this statement.

Faulty products will only be repaired or replaced according to these terms. LEUCO S.p.A. is not liable for any further loss, damage or expense, including accidental or indirect damages caused directly or indirectly from the sale or use of these products.

Any unauthorised use of spare parts that were not manufactured by LEUCO S.p.A. automatically invalidates this guarantee, which is subject to compliance with the instructions for installation and operation provided. There are no additional guarantees other than the guarantee described above.

All [hydraulic motor pumps](#) supplied by LEUCO are carefully controlled during their production and undergo cycles of testing before shipment. For optimum pump performance, to prevent incidents and avoid invalidating the guarantee, it is essential to comply with the procedures described in this manual regarding the correct assembly and initial start-up of the [hydraulic motor pump](#).



LEUCO S.p.A. is not liable for any errors made when drafting this manual.



The Manufacturer is not liable in case of any unauthorised modification to the product or to any part of it and any such action will invalidate the guarantee.

2 GENERAL DESCRIPTION

Hydraulic motor pumps or Hawk motor pumps are high-pressure motor pumps of the highest manufacturing quality, created with the professionalism and passion of the expert workers in the company in Reggio Emilia.

The brand Hawk is a leader in the high-pressure pumps manufacturing industry as well as in the related accessories sector.

Motor pumps stand out on the market as they can work at a pressure of up to 500 bar and a water temperature of 65°C (149°F). for this reason they are very versatile and are normally installed inside vehicles washing system.

Hawk hydraulic motor pumps are units consisting of the power part, a hydraulic motor, and the functional pumping unit (Hawk pump).

The main parameters that determine your choice of Hawk pump are volume, pressure, rotation speed and power consumption.

- The volume is given in litres per minute and is directly proportional to the rotation speed.
- The speed of rotation is given as revolutions per minute.
- The pressure is given in bars and is the maximum pressure that the pump can reach.
- The power consumption is shown in kW and is the absorption required to achieve the maximum flow rate and pressure indicated.

Subsection 2.1.1 shows the performance characteristics of the models referred to in this documentation.




Hawk pumps were not designed for pumping potentially hazardous liquids (explosive, toxic and flammable liquids). Contact the Manufacturer in case of doubt.



Before choosing and/or using any LEUCO product, it is important that the customer controls all aspects related to the specific application with due care and studies the information provided in the technical and sales literature published by LEUCO S.p.A. LEUCO's products and this document are subject to change at any time without notice.

2.1 Main parts

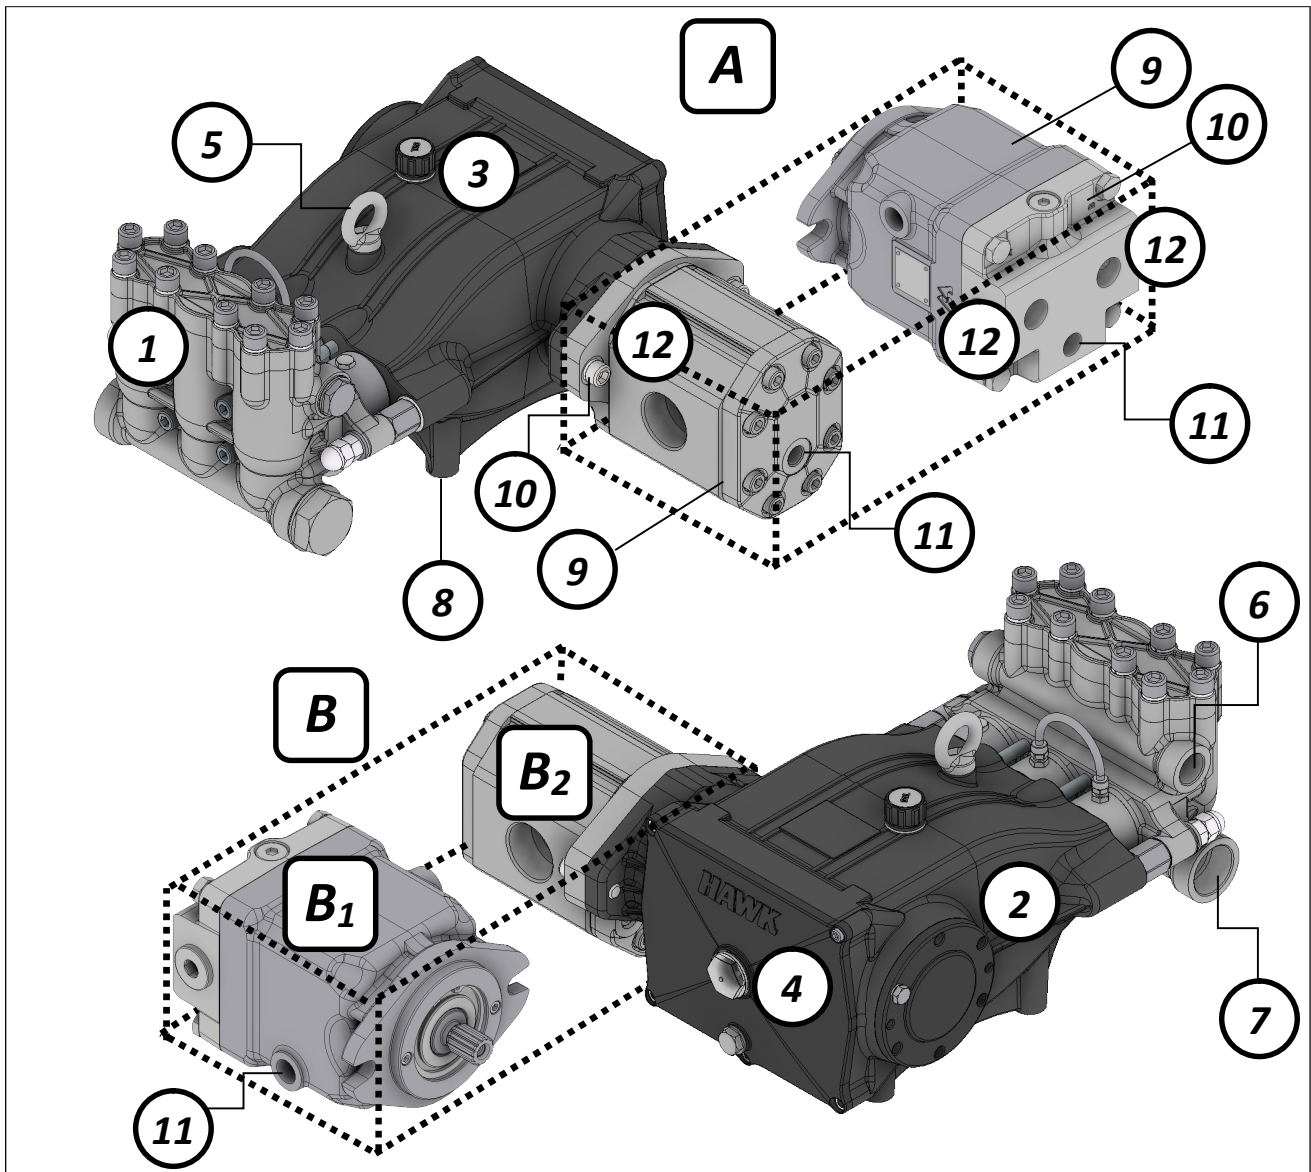

A - HIGH-PRESSURE HOLLOW SHAFT PISTON PUMP

consisting of: head with delivery and intake valves 1; mechanical unit 2; oil level cap on the pump body 3; oil level indicator 4; eyebolt 5; intake coupling 6; suction coupling 7; fixing feet 8.

B - BIDIRECTIONAL HYDRAULIC MOTOR (B1 piston version – B2 gear version)

consisting of: main body 9; flange 10, drain 11; delivery/intake 12.



More details on the parts can be found in the exploded views attached to this manual (ATTACHMENT II).

The pumping action is created by a series of plungers, connected to the drive shaft by connecting rods. During motion, the plungers slide on their axis inside the manifold housing where the suction and delivery lines are fitted with valves that allow the liquid to flow in a single direction.

2.1.1 Technical characteristics

The layout is attached to this manual (ANNEX II). A summary of the main specifications follows:

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-723.0								
TYPE	DESCRIPTION	DISPLACEMENT	CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp
PUMP	NHDP1515HYR	11.2	15	4	150	2200	4.3	5.8
HYDRAULIC MOTOR	GEARS	23.7	33	8.7	105	1520		
WEIGHT		12 kg						

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-722.0								
TYPE	DESCRIPTION	DISPLACEMENT	CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp
PUMP	NHDP1520HYR	11.2	15	4	200	2900	5.7	7.7
HYDRAULIC MOTOR	GEARS	23.7	33	8.7	105	1520		
WEIGHT		12 kg						

HYDRAULIC MOTOR PUMP PART NUMBER 1.905-014.0								
TYPE	DESCRIPTION	DISPLACEMENT	CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/m in	GPM	bar	PSI	kW	Hp
PUMP	NMT2120HYR	15.55	21	5.5	200	2900	7.9	10.7
HYDRAULIC MOTOR	GEARS	23.7	33	8.7	105	1520		
WEIGHT		13.2 kg						

HYDRAULIC MOTOR PUMP PART NUMBER 1.905-015.0								
TYPE	DESCRIPTION	DISPLACEMENT	CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp
PUMP	NPM1825HYR	13	18	4.7	250	3625	8.3	11.5
HYDRAULIC MOTOR	GEARS	23.7	33	8.7	170	2465		
WEIGHT		13.2 kg						

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-896.0								
TYPE	DESCRIPTION	DISPLACEMENT	CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp
PUMP	NLT3020HYR	21.5	30	7.9	200	2900	11.4	15.5
HYDRAULIC MOTOR	GEARS	23.7	33	8.7	170	2465		
WEIGHT		25.4 kg						

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-891.0								
TYPE	DESCRIPTION	DISPLACEMENT	CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp
PUMP	XLT4017HYR	28	40	10.6	170	2465	11.2	15.2
HYDRAULIC MOTOR	GEARS	44	59.9	8.7	140	2030		
WEIGHT		28 kg						

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-892.0								
TYPE	DESCRIPTION	DISPLACEMENT	CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp
PUMP	XLT5015HYR	35.1	50	13.2	150	2175	11.2	15.2
HYDRAULIC MOTOR	GEARS	44	59.9	18.8	155	2240		
WEIGHT		28 kg						

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-893.0								
TYPE	DESCRIPTION	DISPLACEMENT	CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp
PUMP	XXT5520HYR	39.8	55	14.6	200	2900	21.2	28.8
HYDRAULIC MOTOR	GEARS	52	71.5	18.8	195	2820		
WEIGHT		28.6 kg						

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-894.0								
TYPE	DESCRIPTION	DISPLACEMENT	CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp
PUMP	XXT7015HYR	50	70	18.5	150	2175	20	27.1
HYDRAULIC MOTOR	GEARS	52	71.5	18.8	185	2660		
WEIGHT		28.6 kg						

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-895.0								
TYPE	DESCRIPTION	DISPLACEMENT	CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp
PUMP	PX2150HYR	16.3	21.5	5.7	500	7250	20.3	27.6
HYDRAULIC MOTOR	GEARS	52	71.5	18.8	190	2700		
WEIGHT		29.8 kg						

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-900.0								
TYPE	DESCRIPTION	DISPLACEMENT	CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp
PUMP	MXT7020HYR	53	70	18.5	200	2900	26.4	35.9
HYDRAULIC MOTOR	GEARS	71	97.6	25.8	165	2400		
WEIGHT		42.7 kg						

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-899.0								
TYPE	DESCRIPTION	DISPLACEMENT	CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp
PUMP	MXT1015HYR	74.2	100	18.5	150	2175	27.7	37.7
HYDRAULIC MOTOR	GEARS	71	97.6	25.8	170	2500		
WEIGHT		42.7 kg						

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-911.0

TYPE	DESCRIPTION	DISPLACEMENT			CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp		
PUMP	MXT7020HYR	53	70	18.5	200	2900	26.4	35.9		
HYDRAULIC MOTOR	PISTONS	47	68.5	18.1	260	3700				
WEIGHT		49.7 kg								

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-910.0

TYPE	DESCRIPTION	DISPLACEMENT			CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp		
PUMP	MXT1015HYR	74.2	100	18.5	150	2175	27.7	37.7		
HYDRAULIC MOTOR	PISTONS	47	68.5	18.1	270	3900				
WEIGHT		49.7 kg								

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-914.0

TYPE	DESCRIPTION	DISPLACEMENT			CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp		
PUMP	MXT1015HYR	74.2	100	18.5	150	2175	27.7	37.7		
HYDRAULIC MOTOR	PISTONS	62	90.3	23.9	205	3000				
WEIGHT		49.7 kg								

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-897.0

TYPE	DESCRIPTION	DISPLACEMENT			CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp		
PUMP	MPX4535HYR	34.2	45	11.9	350	5075	29.4	40.5		
HYDRAULIC MOTOR	GEARS	71	97.6	25.8	185	2700				
WEIGHT		44.7 kg								

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-898.0

TYPE	DESCRIPTION	DISPLACEMENT			CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp		
PUMP	MPX5825HYR	39.9	58	15.4	250	3625	26.9	36.5		
HYDRAULIC MOTOR	GEARS	71	97.6	25.8	185	2700				
WEIGHT		44.7 kg								

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-908.0

TYPE	DESCRIPTION	DISPLACEMENT			CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp		
PUMP	MPX4535HYR	34.2	45	11.9	350	5075	29.4	40.5		
HYDRAULIC MOTOR	PISTONS	47	68.5	18.1	290	4200				
WEIGHT		51.7 kg								

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-912.0								
TYPE	DESCRIPTION	DISPLACEMENT	CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp
PUMP	MPX4535HYR	34.2	45	11.9	350	5075	29.4	40.5
HYDRAULIC MOTOR	PISTONS	62	90.3	23.8	220	3200		
WEIGHT		51.7 kg						

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-909.0								
TYPE	DESCRIPTION	DISPLACEMENT	CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp
PUMP	MPX5825HYR	39.9	58	15.4	250	3625	26.9	36.5
HYDRAULIC MOTOR	PISTONS	47	68.5	18.1	270	3900		
WEIGHT		51.7 kg						

HYDRAULIC MOTOR PUMP PART NUMBER 1.904-913.0								
TYPE	DESCRIPTION	DISPLACEMENT	CAPACITY @ 1450 rpm		PRESSURE		POWER	
		cc/rev	lt/min	GPM	bar	PSI	kW	Hp
PUMP	MPX5825HYR	39.9	58	15.4	250	3625	26.9	36.5
HYDRAULIC MOTOR	PISTONS	62	90.3	23.8	200	2900		
WEIGHT		51.7 kg						

* The hydraulic motor performance is the result of mathematical calculations and must be checked by the final installer according to the characteristics of the hydraulic circuit.

2.2 Local conditions

The local operating conditions are specified on the product's specifications plate (see the fac-simile in section 3.8). Some of the operating conditions are listed below.

Parameter	Tolerated values
Room temperature	from -10°C to +50°C
Storage temperature	from 0°C to +50°C
Humidity	from 20% to 80%



The Hawk **motor pumps** described in this manual were **NOT** designed or built for operating in potentially explosive environments.

2.3 2.3 Vibration

Hawk **motor pumps** will not produce hazardous vibrations in conditions of normal use and provided the installation and assembly instructions in this document were carried out properly. There will be no contact with the operator during operation, as the pump is part of the machine/system where it is fitted.

2.4 Noise

The equipment was designed and built to reduce the generation of noise at source as far as its application and method of use allows this.

2.5 High temperatures

Mechanical parts are lubricated to prevent them overheating as a result of prolonged friction. The lubricating oil is indicated below in this manual and takes into account the specifications of the pumps that make up the assembly. There is no probable risk provided normal maintenance procedures are followed.

Operators should use appropriate personal protective equipment provided, including work wear and gloves.

2.6 Stability

Instructions are supplied with LEUCO **motor pumps** to ensure a stable and safe assembly on the machine/system that incorporates them. The assembler/operator must follow these instructions carefully.

The motor pump was designed and built so that they do not present any hazard in terms of stability in conditions of normal use.



More information is provided in section 5 "Installation".

2.7 Pressurised liquids



The **motor pumps** described in this manual are built using materials that are capable of tolerating the envisaged operating pressures. They are complete with all the necessary parts (plugs, valves, plungers, etc..) for the correct operation and circulation of the liquids (water and lubricating oil). The lubricating transmission products contained in the pump body are used to safeguard correct pump operation by keeping the mechanical parts lubricated.

3 SAFETY











3.1 General safety instructions


Hawk motor pumps were designed to be safe to operate for the intended purposes, provided they are run (incorporated), used and maintained according to the instructions in these operating and maintenance instructions.

Before attempting to install or use the motor pumps, the machine operators and any other personnel involved must read and understand the instructions provided in the manual and the project data for installation.

	<p>Do not tamper with equipment. The manufacturer is not liable in case of incorrect pump operation or for any damage resulting from use of the product if tampering is suspected.</p>
	<p>Before using the equipment, make sure that any safety hazard has been eliminated.</p>


Operators must follow the safety instructions below:


	Do not attempt to remove or alter any part of the pump, unless instructed in this manual and in the manner described.
	Only qualified technical personnel authorised by the Manufacturer may undertake internal inspections, modifications or repairs.
	Do not allow unauthorised personnel to tamper with the equipment.
	Do not wear rings, wrist watches, jewellery, loose clothing or items like neck ties, scarves, torn clothing, unbuttoned jackets or shirts with open zips, as these could get caught in moving parts.
	Wear appropriate personal protective equipment as specified in the manual for the work to be carried out.
	Make sure all the steps described in the section on maintenance are carried out regularly.
	The equipment must be taken out of service immediately in case of malfunction or damage that could affect its operation and safety.
	Notify the personnel in charge of maintenance in case of any operating anomaly.
	Make sure that all protective guards and other devices are in place and that all safety devices are present and working properly (hydraulic motor pump crankcase and the safety devices on the machine/system where the pump is fitted).
	Check that the direction of rotation of the motor is the same as that of the pump when it is started up for the first time or after any maintenance.

	<p>Check if there are any other safety instructions that must be followed in the Operating and Maintenance Manual for the machine where the pump is fitted.</p>
---	--


3.2 Residual risks

The pumps were designed and built in order to eliminate any risks associated with their operation. The residual risks are described below:

a) Crushing:	
Handling and positioning the pump/motor pump may bring the risk of crushing the upper limbs or hands or feet. Pay particular attention when undertaking these actions. It is compulsory to wear the personal protective equipment provided (work gloves and boots) and to comply with all the procedures designed to safeguard the correct completion of the operating cycle.	

b) Heat-related hazards:	
The hydraulic motor pump can reach high temperatures during operation depending on the temperature of the pumped liquid. As a result, the person in charge of the installation must bear this in mind and provide appropriate safety devices and warning signs for personnel.	

3.3 Personal protective equipment

	Failure to use the personal protective equipment specified in this section will expose the machine operators to danger. Employers are required to provide personal protective equipment to the operators using the machine referred to in this manual.
---	---

The operators using the equipment must wear the following personal protective equipment, in line with the work being carried out:

- **Personal protective equipment against the risk of cuts, bruises and high temperatures (max 85 °C)**
- **Work boots**
- **Safety goggles or glasses (if necessary)**



The Employer may decide to use additional safety equipment after assessing any risks and considering any changes made to the production processes.

3.4 Working safely

To reduce the consequences of the hazards described in the section above, operators must comply with the following instructions:

- **Wear** the personal protective equipment referred to in section 3.3;
- **Monitor areas where any hazard is present**, do not start a test cycle if there are any persons located within the hazardous area or in the immediate vicinity who are not involved in the job to be undertaken. Release the controls immediately should any unauthorised persons enter the hazardous area when work is underway.

3.4.1 Safety when using the hydraulic motor pump

The area and environment that the high pressure system operates in must be clearly signposted and prohibited to unauthorised personnel. The area should also be restricted and defined. The staff responsible for carrying out the work must first undergo workplace conduct training as well as training on the risks arising from high pressure system damages or defects.

Prior to starting up the system, the operator or operators are required to check:

- that the system has the correct power supply.
- The correct and appropriate protection **of the pump and the hydraulic motor** as well as their effective efficiency
- that the high pressure hoses and hose fittings do not exhibit signs of abrasion or excessive wear i.

Any defect, damage or reasonable doubt that might arise before or during the operation must be reported and verified by qualified staff. Should this happen, the system must be stopped immediately and the pressure brought down to zero.

3.4.2 3.4.2 Safety when using high pressure circuits

Here below are some basic indications regarding the high pressure in which the **hydraulic motor pump** can be inserted.

Components of the high pressure circuits, particularly those that mainly operate outdoors, must be imperviousness to weather conditions such as rain, frost or heat. All electrical parts should have adequate protection against direct or indirect sprays of water and be suitable for use in wet environments.

High pressure hoses must be sized in accordance with the maximum operating pressure of the circuit and always within the field of operation specified by the hose manufacturer. These precautions should also be respected for all the components found within high pressure circuits. The ends of the high pressure hoses should be sheathed or, in any event, secured to a structure in order to prevent dangerous whiplash in the event of a blast or a rupture in the connections.



Check if there are any other safety instructions that must be followed in the Operating and Maintenance Manual for the machine where the pump is fitted.

3.4.3 Safety of the high-pressure circuit on the hydraulic motor

- The high-pressure lines on the motor must always provide for appropriately calibrated relief valves, in addition to the directional control valves and flow rate control valves.
- The high-pressure pipes on the oil lines must be correctly sized for the maximum working pressure of the system and used only within the working pressure range indicated by the pipe manufacturer, which must be indicated on the pipe.
- The ends of the high-pressure pipes must be sheathed and fastened to a solid structure, to avoid hazardous whiplash if the connections rupture.

3.4.4 3.4.3 Rules of conduct regarding the use of high pressure lance

Here below are some basic indications regarding the use of the pump with high pressure lance equipment.

Those who operate high pressure nozzles must always put their own safety - as well as the safety of third parties likely to be affected by their actions - before any other assessment or action in respect of the situation. Their work must always be guided by common sense and an awareness of responsibility and precautions.









The operator must always acquire appropriate personal protective equipment (helmet with protective visor, waterproof overalls and rubber boots) that guarantee good grip and stability on the ground in wet conditions.

The area affected by the water jet must be prohibited and free from objects which, if hit by the jet, might be damaged or projected elsewhere.

The jet should always be aimed in the direction of the workspace, including during preliminary or trial operations. Attention must always be paid to the trajectory of debris removed from the jet. If necessary, anything that might be exposed to the jet should be given adequate protection.

 	<p>Check if there are any other safety instructions that must be followed in the Operating and Maintenance Manual for the machine where the pump is fitted.</p>
---	--

3.5 Safety during lifting and handling

 	<p>Before starting work, clear the work area so that the lifting and movement of materials can be undertaken in safety.</p>
 	<p>Only authorised qualified personnel who have received specific training may undertake unloading, loading, handling and lifting operations.</p>
 	<p>People who are not involved in the operations must keep at a safe distance during lifting and handling.</p>
 	<p>All equipment used for lifting and transport, including accessories (such as hooks, ropes and chains), must be a suitable capacity and checked regularly according to legal standards.</p>

3.5.1 Packing, unpacking and transport

The packing used for Hawk **motor pumps** was designed specifically to prevent damage caused by impact or vibration during transport or handling.







Each motor pump is packed so that it is protected from stress and impact, and will not be damaged during transport.

Based on the amount of goods to be shipped and the final place of destination, the packed pumps can be placed on a pallet to facilitate lifting and handling.

When unpacking, check the parts are intact and they are the correct amount. If any parts are damaged or missing, contact your dealer or the Manufacturer for instructions.

Dispose of packing materials correctly according to legal obligations.

Different means of transport may be used to ship Hawk **motor pumps** (road, rail, sea or air) depending on their final destination. Secure the packs to the vehicle properly during transport to prevent movement.

 	<p>Failure to comply with these instructions may lead to situations of extreme danger.</p>
 	<p>Use appropriate handling systems to ensure the safety of people and objects.</p>
 	<p>Motor pumps not used immediately must be stored in their packaging to protect them from humidity and temperature and humidity variations as much as possible. Do not place the packaging containing the pumps in direct contact with the ground in the store.</p>

3.6 Safety during Maintenance

Follow the instructions below whenever carrying out any maintenance or repair work:



Depressurise the water supply in the pump and the hydraulic supply in the motor before starting any maintenance or repair work

- Before starting work, hang a "**MACHINE UNDERGOING MAINTENANCE**" sign in a prominent position on the machine/system where the **hydraulic motor pump** is fitted
- Do not use solvents or flammable chemicals or materials for cleaning that could generate static electricity
- Pay attention not to spill any oil or lubricant
- When you have finished the job, replace any safety guards and covers that were removed or opened and secure them properly.



Only qualified technical personnel are authorised to carry out maintenance/repair work.

3.7 Products used

All the products used during normal operation, including oils, lubricants and cleaning products, must be used as instructed in the safety notices provided by the manufacturer.



Use the oil already in the pump for the first 50 hours and then replace with SAE 10/40W oil, as shown on the label.

Dispose of used oil correctly according to legal obligations.

3.8 Product Labels

The hazard, warning and compulsory signs illustrated in this manual are placed in the vicinity of the equipment. Providing an exact description of the pump, model, serial number and technical data makes it easier for the technical personnel to deliver a fast and efficient service (if needed).

The identification data is on the label attached to the equipment, as shown below.

	<p>Do not remove (or change the position) of any type of id plate and/or labels containing information and/or warning notices on the equipment.</p>
--	--

FAC – SIMILE
Machine ID plate

	Via Pietro Colletta, 20 42124 Reggio Emilia ITALY Tel. 0522/923011	MOTORPUMP MODEL	Weight/Peso 12 kg
	NHDP1515HY+ALM2 34		
	1.904-723.0		
	<i>Speed/Velocità</i>	<i>Power/Potenza</i>	
	1450 rpm	4.3 kW	
	PUMP/POMPA		
<i>Pressure/Pressione</i>	<i>Volume/Portata</i>		
150 bar	15 t/min		
HYDRAULIC MOT./MOTORE IDR.			
<i>Pressure/Pressione</i>	<i>Volume/Portata</i>		
105 bar *	33lt/min *		
S <small>ERIAL</small> N <small>UMBER</small>		M <small>ADE</small> I <small>N</small> I <small>TALY</small>	

* Indicative values obtained from theoretical calculations.

Other signs on the equipment

			<p>The label* is attached to the plug on the top of the pump body.</p> <p>* the label on the plug is the same colour as the plug and so may vary depending on the model of pump.</p>
--	--	--	--

3.9 3.9 First Aid

A brief description follows of some of the standard First Aid procedures that may be useful in case of injury when using the [hydraulic motor pump](#) or the machine/plant where it is fitted.

They may be useful if a machine operator has to handle an emergency when using the equipment during the various stages of its working life (transport, installation, operation, maintenance, adjustments, etc.) to help himself or to assist others in the direct vicinity of the equipment.

3.9.1 What the First Aider does

- a) Calls for help (emergency services);
- b) Assesses the condition of the injured person and sustains their vital functions, if necessary;
- c) Stops the flow of blood;
- d) Protects wounds and burns;
- e) Protects the injured person from further injury;
- f) Does not take any unnecessary or potentially harmful initiative like moving the injured person or giving him a drink, attempting to treat sprains and/or broken bones, etc.

3.9.2 The Emergency Call

To be sure of a successful outcome, it is important to make sure the emergency services can reach the place of the event without delay.

So it is very important that the first aider who calls the emergency services, gives the following information:

- The address where the accident (or medical emergency) has taken place;
- How many people are injured (or ill);
- What may have caused the emergency;
- The status of the injured person's vital functions, whether he is conscious or not, and whether he is breathing normally or not.

After confirming the above information, it is advisable:

- To give your own name and a telephone number where you can be reached;
- To wait outside for the emergency services to arrive (near the main entrance, for example).

Calling the emergency services is of major importance. Do everything you are instructed to do by the emergency team to ensure a successful outcome.

3.9.3 Injuries

What to do in case of sprains, dislocations or broken bones:

Use a splint or a bandage to immobilise the area where the injury occurred, in the position that causes less pain for the injured person and without attempting any unnecessary and potentially harmful manoeuvres. Apply a cold pack (an ice pack or similar); In case of an open fracture, apply pressure away from the fracture to stop the bleeding and then cover the injury with a sterile dressing.

Bruises, crushing:

If the upper or lower extremities of a limb have been bruised and/or crushed (fingers, hands, feet, etc.), put the affected limb immediately under (cold) running water and then apply an ice pack. Check for open wounds and/or cuts and disinfect the affected area if necessary.

3.9.4 Bleeding

It may be necessary to apply direct pressure to the bleeding area using a sterile dressing, lift the limb and apply pressure upstream to the origin of the bleeding with a tourniquet



Surface wounds:

Expose the wound and clean it with water, disinfect it with saline solution and medicate it, covering it with a sterile dressing. Cover this with a bandage without tightening the bandage excessively to permit normal circulation

Deep wounds:

Wearing gloves and a facemask to protect yourself from the risk of infection is a priority. Compress the area until the bleeding stops or the ambulance arrives by applying direct pressure or using other pressure points. Call the emergency services (each country has its own number for the emergency services) and inform them that the person has arterial bleeding.

Do not attempt to treat the wound before the bleeding has been controlled..



	Do NOT use cotton wool, alcohol or antibiotic powder to disinfect a wound.
	Always remember to wear latex gloves to prevent contact with body fluids.

4 INTENDED USE

4.1 Intended use

Hawk **motor pumps** must not be used for any other purposes than those described in these instructions. Complying with the terms of use, repair and maintenance specified by the Manufacturer in strict accordance are an essential element with regard to the intended use.


The Hawk **motor pumps** described in these instructions were designed and built to be incorporated in cleaning machines/equipment (high pressure cleaner). They must be used in a manner that corresponds to their technical specifications (section 2.1.1), without unauthorised modifications and not be used for improper purposes.

	The pump may ONLY be used and fitted by trained and qualified personnel who are familiar with the information in this manual.
	Do not operate the hydraulic motor pump until the machine where it is fitted has been declared as compliant with current legal standards (e.g. 2006/42/EC directive).

4.2 Improper Uses

The equipment must not be used:

- By any other recipients than those referred to in 1.1.2
- For any other uses than those described in section 2 and section 4.1
- In any other operating conditions than those described in section 2.2
- For pumping liquids that are flammable, toxic, corrosive or with an unsuitable density or temperatures higher than those specified in the technical data listed in this document or on the product's specifications label
- For pumping drinking water
- For food uses
- For pharmaceuticals
- In potentially explosive atmospheres (see the specific Hawk product range)

	The Manufacturer reserves the right to review the terms of the guarantee if the equipment is used for any other purpose than those mentioned above.
---	--

5 INSTALLATION AND ASSEMBLY


Read this chapter with due care before starting to install the machine.




Failure to install the pumping system correctly can result in injury or damage to property: it is important to follow all the points below.

The **hydraulic** pump-motor unit is assembled by direct coupling between the **hollow** eccentric pump shaft and the **hydraulic** motor shaft.

Read the following points carefully:

	The pump should be installed horizontally with respect to its base to facilitate optimum lubrication, on an anti-vibration base.
	The pump's suction pipe must be proportional to the volume and its diameter must not be smaller than the suction mouth. It is important there are as few bottlenecks on this line as possible (elbows, T couplings, reductions, etc...). Each junction on the suction line must be sealed properly with Teflon tape or a similar product to avoid leaks or air intake (cavitation). Cavitation is the formation of bubbles of steam in the liquid: their implosion generates abnormal stress, which is very damaging for all pump parts. To safeguard optimum pump life, avoid the circulation of liquid containing sand or other solid particles as this affects the efficiency of valves, the plungers and seals. Always fit a larger suction filter than the pump flow rate. The filter should be cleaned regularly..
	The delivery pipe must be able to support the operating pressure of the pump. Excessively narrow passages can result in lance pressure loss.
	To prevent injury and damage to the pump, it is essential to fit a pressure control valve and a safety valve to prevent the pressure accidentally exceeding its operating level. Contact our technical staff before fitting these valves. To keep the system pressure under control, a pressure gauge should be fitted on the delivery line with an appropriate bottom scale.
	The preferential direction of rotation of the pump is indicated in the respective manual. Check the direction of rotation of the hydraulic motor to ensure it is correct. Check the correct connection of the intake and delivery lines on the motor.
	Connect the hydraulic motor drain to a suitable drainage line. On this line connected to the tank, the maximum pressure must not exceed 1.5 bar.
	Thoroughly clean the coupling surfaces.
	The motor pump unit cannot be fastened rigidly to the frame of the base, elastic anti-vibration elements must be used for the fixing.
	Install an appropriately sized filter on the pump inlet according to the pump flow rate, with filtration level 20 -50 µm. Even though the use of clean water is required, the filter must be installed to prevent any impurities in the plant from circulating inside the pump.
	During operation, the casing must always contain an appropriate amount of oil to lubricate the moving mechanical parts. The correct level is indicated by the mid-way line on the oil level indicator.
	As concerns the hydraulic motor, it is recommended to use anti-oxidant, anti-corrosion and antifoam mineral oil according to standard HLP (DIN 51525) or HM (ISO6743/4).
	In operating conditions, the oil feeding the hydraulic motor must: <ul style="list-style-type: none"> • work in a temperature range of -10°C to 82 °C • have kinematic viscosity 10/70 cSt • have appropriate filtration

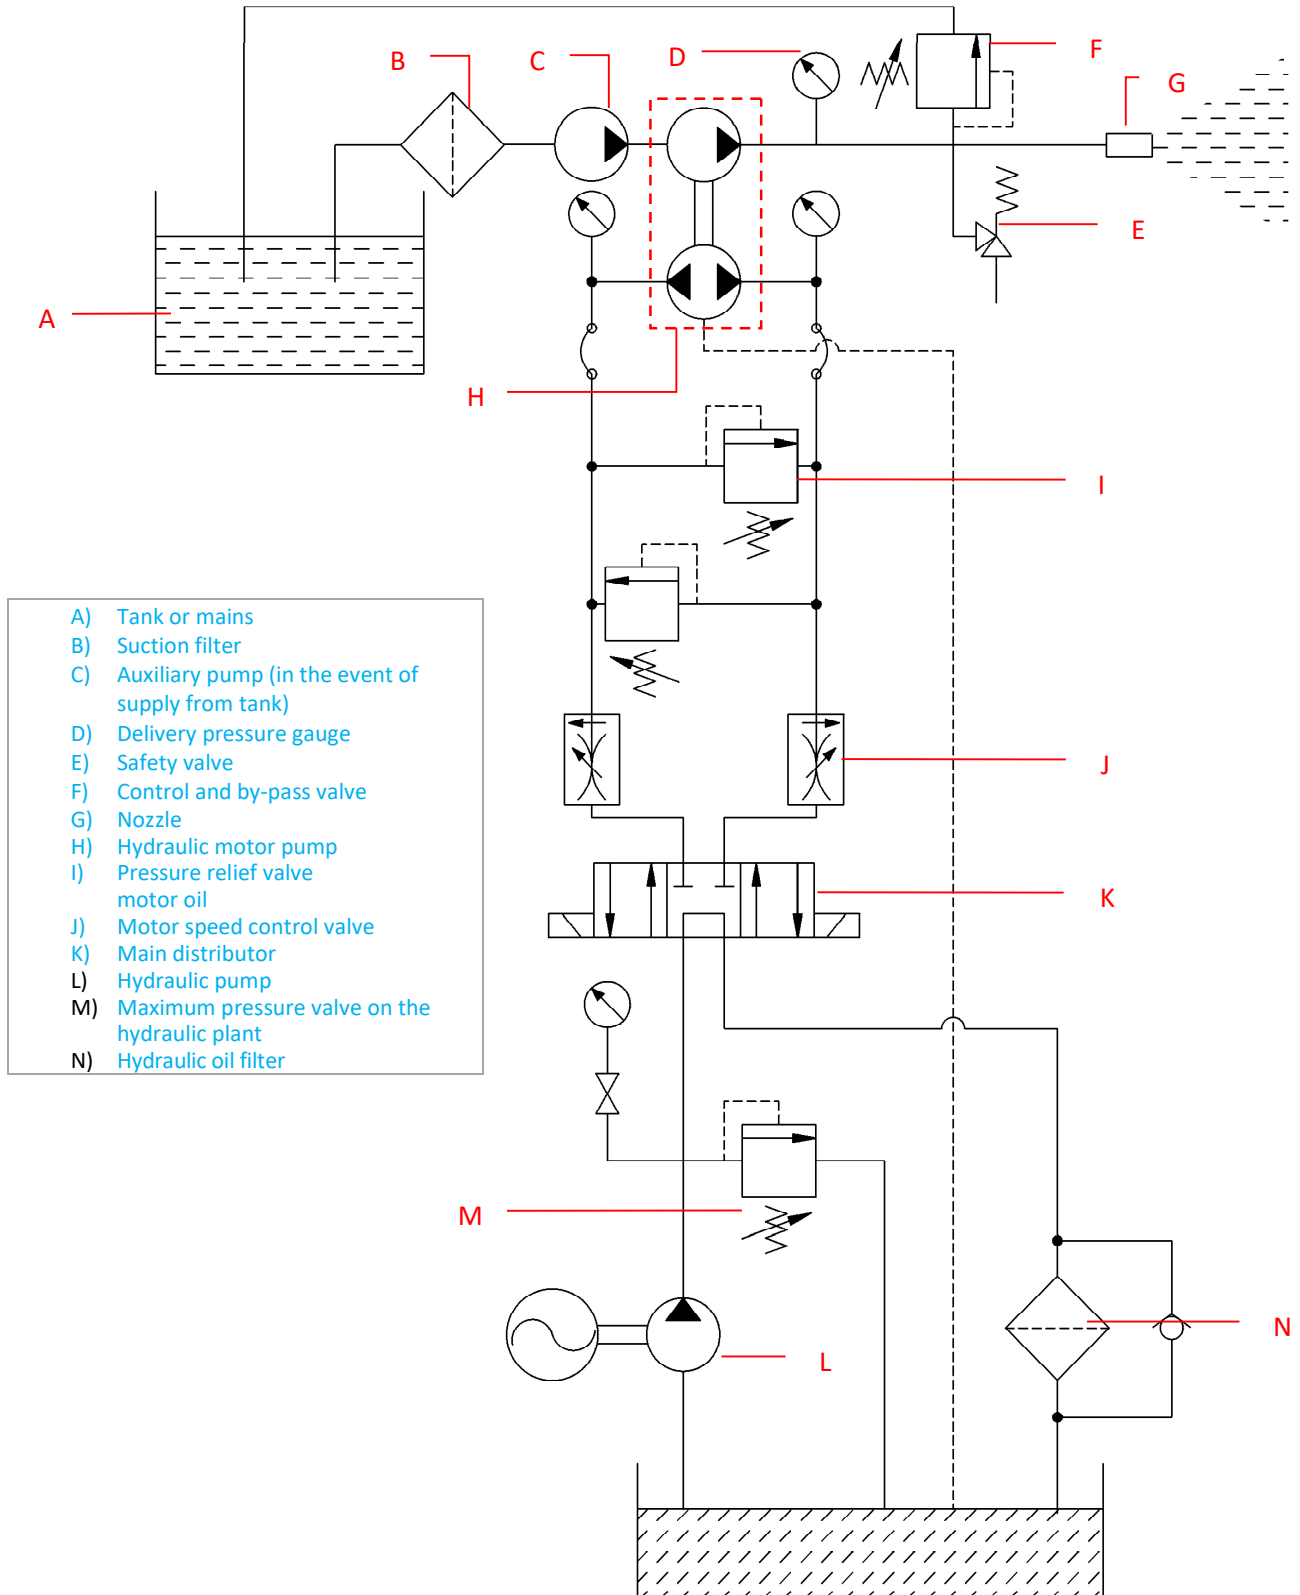


- A) Tank or mains
- B) Suction filter
- C) Auxiliary pump (in the event of supply from tank)
- D) Delivery pressure gauge
- E) Safety valve
- F) Control and by-pass valve
- G) Nozzle
- H) Hydraulic motor pump
- I) Pressure relief valve motor oil
- J) Motor speed control valve
- K) Main distributor
- L) Hydraulic pump
- M) Maximum pressure valve on the hydraulic plant
- N) Hydraulic oil filter







All the hydraulic motors used with Hawk motor pumps are bidirectional.

5.1 Responsibilities of the Customer/User

The customer/User are responsible for:







	Check the conditions of the hydraulic motor pump on delivery . Contact LEUCO S.p.A. in case of damage conditions that do not match the purchase order.
	The assembler/end user must fit a maximum pressure valve near the pump delivery line outlet .

5.1.1 Pump

	The feed and delivery pipes on the pump must not be crushed or excessively bent (e.g.: 90°). Irregularities in the delivery pipes cause losses in pressure, while irregularities on the feed pipe could cause cavitation.
	The pipe connections near the delivery and intake must be flexible.
	Feed the pump at a pressure of 3 – 5 bar. Even in the event of a plant stoppage, the hydraulic part of the pump must always be filled with water
	The pump hydraulic plant must be equipped with systems to prevent it from emptying, even partially, when stopped.
	Use appropriately sizes pressure accumulators to reduce the pulsation in the hydraulic circuit.
	Tighten the delivery connections according to the table indicated.

SERRAGGI RACCORDI DI MANDATA				
	G.1/4"	G.3/8"	G.1/2"	G.3/4"
COPPIA [Nm]	25	40	150	120

5.1.2 Hydraulic motor

	The feed and delivery pipes on the pump must not be crushed or excessively bent (e.g.: 90°). Irregularities in the pipes lead to losses in pressure.
	The pipes must be able to cope with the maximum pressure indicated and be of an appropriate size for the related flow rate
	The pipe connections near the delivery, intake and drainage must be flexible.
	Fit control valves and maximum pressure valves on the plant to suit the operating conditions.
	The diameter of the drainage pipe must be sufficiently large to allow the oil to drain at a speed of no more than 2.5 m/s.
	Tighten the delivery connections according to the table indicated.

	CONNECTIONS					
	G 1/4"	G 3/8"	G 1/2"	G 3/4"	G 1 1/4"	G 1 1/2"
GEAR BOX WITH ALUMINIUM CASE	20 [Nm]	30 [Nm]	-	60 [Nm]	80 [Nm]	90 [Nm]
IRON HOUSING AND PISTONS	-	-	80 [Nm]	160 [Nm]	-	-



For further information on connections refer to the **Operating and Maintenance Manual for the main machine incorporating the hydraulic motor pump**. These connections must be made by qualified staff.

5.2 Pre-commissioning instructions

A series of checks and controls must be completed before starting up the **hydraulic motor pump** for the first time in order to prevent errors or accidents during commissioning:

- Check the machine was not damaged during assembly, installation and transport (check its stability, screws and/or bolts are tight, mechanical parts/gears are coupled correctly)
- If you notice any leaks from pressurised pipes, stop the pump immediately and find and solve what is causing the leak
- **Before starting up the pump**, make sure the oil **in the pump** is up to level. We recommend the first oil change within the first 50 hours of operation. Subsequent oil changes should take place every 500 hours, or more often in case of heavy use. The type of oil to use for our pumps is SAE 10/40W, as indicated on the specifications plate
- Replace the oil cap used for shipment with the cap with the dipstick and bleed supplied.



Always comply with the safety instructions in section 3.



Failure to comply with these operating conditions invalidates the guarantee.



If the equipment does not appear capable of running safely and correctly, TAKE IT OUT OF SERVICE until it has been repaired or any damaged parts have been replaced .

After the installer has completed all of the necessary connections, he will complete a series of tests to check all of the devices fitted are operating properly:

- Replace the black cap on the pump with the cap with the dipstick supplied.
- Check the correct oil level in the pump through the indicator or using the dipstick. Top up if necessary.
- Make sure that all the couplings are correctly tightened and that the pump supply is connected and/or open.

On first start-up of the pump and the motor, it is recommended to:



- After starting up the pump, aid priming by keeping the delivery line open (lance). Do not let the pump run dry: this can result in rapid seal wear and invalidates the warranty.
- After use, run the pump with clean water for several minutes. Do not use the pump at very low temperatures. To prevent freezing, run the pump dry for about 20 seconds to drain the pipes.

- Power the hydraulic motor for 3/5 seconds at low speed until the liquid comes out from the pump delivery uniformly and constantly. If this does not happen, stop the motor pump for a few seconds and repeat the operation.
- The installer is in any case required to test the complete plant for an appropriate time in order to check for any leaks, overheating, and constant performance.

5.3 Long periods of inactivity

In case of long periods of inactivity, follow the instructions below:




- Run the pump with clean water for several minutes
- Run the pump dry for about 10 seconds with the delivery line open (lance) to drain the pump and the delivery circuit and prevent the formation of scale
- Clean the pump with water and solvents authorised by current legal standards
- Dry the pump using compressed air
- Grease any unpainted parts
- Do not let the system come into contact with corrosive substances
- Store the **hydraulic motor pump** in a dry place at a humidity level lower than 90% and protect it from impacts, vibration, stresses and jumps in temperature.

	<p>The properties of mineral oils are impaired if they are not used or remain inactive for more than six months, and so must be replaced.</p>
	<p>When resuming operation of the machine after a long period of inactivity, repeat the checks carried out prior to the initial start up (section 5.2). Also check the screws and the level of the oil.</p>

5.4 Operation

To safeguard proper pump operation, the pump should preferably be fed (maximum pressure 8 bar), otherwise it should be located under the water head or at the same level as the tank.

Hawk **motor pumps** are delivered with their first oil fill and are fitted with a sealed cap to prevent oil spilling during transport. Before starting to use the pump for the first time, remember to replace the sealed cap with the cap with the dipstick and bleed.

	<p>Poor supply can cause serious damage to the pump, such as priming problems, vibration, noise and short seal life.</p>
	<p>The hydraulic motor pump should not be used at higher pressures or speeds of rotation than those shown on the product's specifications plate.</p>
	<p>If the machine is placed in an area exposed to the risk of frost, it is advised to make the pump take in a mix of antifreeze liquid beforehand. In any case, it is recommended to keep the machine in a warm place for a few hours prior to use.</p>

NOZZLE TABLE: the table below is an example of how to choose the nozzle correctly based on the pump's specifications (maximum pressure and flow rate factor). The table gives an example (pump with Pmax=100 bar and Flow Rate =15 l/min).

Select the pressure in the first line and go down the table to the flow rate factor that is closest to that of the pump, rounded down, to get the best type of nozzle to achieve the values followed. To be sure the pressure ratings will remain constant over time, choose a nozzle matching the flow rate factor immediately below the next one (in the example, the value is circled in green).

FATTOR E	FLOW RATE
PORTATA (L/MIN) ALLA PRESSIONE	FLOW RATE (L/MIN) TO



FATTORE PORTATA	PORTATA (L/MIN) ALLA PRESSIONE (BAR)												PORTATA (L/MIN) ALLA PRESSIONE (BAR)												
	BAR	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	220	240	250	280	300	320	350	
O2	3,3	3,6	3,8	4,1	4,4	4,6	4,8	5,0	5,2	5,4	5,6	5,8	6,0	6,2	6,3	6,5	6,8	7,1	7,3	7,7	8,0	8,2	8,6		
O3	4,8	5,3	5,7	6,1	6,5	6,8	7,1	7,4	7,8	8,0	8,3	8,6	8,9	9,1	9,4	9,6	10,1	10,5	10,8	11,4	11,8	12,2	12,7		
O4	6,4	7,0	7,6	8,1	8,6	9,1	9,5	10,0	10,4	10,8	11,1	11,5	11,9	12,2	12,5	12,9	13,5	14,1	14,4	15,2	15,8	16,3	17,0		
O45	7,3	8,0	8,6	9,2	9,8	10,3	10,8	11,3	11,7	12,2	12,6	13,0	13,4	13,8	14,2	14,6	15,3	16,0	16,3	17,2	17,8	18,4	19,3		
O5	8,1	8,8	9,5	10,2	10,8	11,4	12,0	12,5	13,0	13,5	14,0	14,4	14,9	15,3	15,7	16,1	16,9	17,7	18,0	19,1	19,7	20,4	21,3		
O55	8,8	9,7	10,5	11,2	11,9	12,5	13,1	13,7	14,3	14,8	15,3	15,8	16,3	16,8	17,2	17,7	18,5	19,4	19,8	20,9	21,7	22,4	23,4		
O6	9,7	10,6	11,5	12,3	13,0	13,7	14,4	15,0	15,6	16,2	16,8	17,3	17,9	18,4	18,9	19,4	20,3	21,2	21,7	22,9	23,7	24,5	25,6		
O65	10,5	11,5	12,4	13,2	14,0	14,8	15,5	16,2	16,9	17,5	18,1	18,7	19,3	19,9	20,4	20,9	22,0	22,9	23,4	24,8	25,6	26,5	27,7		
O7	11,3	12,4	13,4	14,3	15,2	16,0	16,8	17,5	18,2	18,9	19,6	20,2	20,9	21,5	22,1	22,6	23,7	24,8	25,3	26,8	27,7	28,6	29,9		
O75	12,1	13,2	14,3	15,3	16,2	17,1	17,9	18,7	19,5	20,2	20,9	21,6	22,3	22,9	23,6	24,2	25,4	26,5	27,0	28,6	29,6	30,6	32,0		
O8	12,9	14,1	15,2	16,3	17,3	18,2	19,1	19,9	20,8	21,5	22,3	23,0	23,7	24,4	25,1	25,7	27,0	28,2	28,8	30,5	31,5	32,6	34,0		
O85	13,7	15,0	16,2	17,4	18,4	19,4	20,3	21,3	22,1	23,0	23,8	24,5	25,3	26,0	26,7	27,4	28,8	30,1	30,7	32,5	33,6	34,7	36,3		
O9	14,8	16,3	17,6	18,8	19,9	21,0	22,0	23,0	23,9	24,8	25,7	26,6	27,4	28,2	28,9	29,7	31,1	32,5	33,2	35,1	36,4	37,6	39,3		
O95	15,6	17,0	18,4	19,7	20,9	22,0	23,1	24,1	25,1	26,0	26,9	27,8	28,7	29,5	30,3	31,1	32,6	34,1	34,8	36,8	38,1	39,4	41,2		
10	16,3	17,8	19,2	20,6	21,8	23,0	24,1	25,2	26,2	27,2	28,2	29,1	30,0	30,9	31,7	32,5	34,1	35,6	36,4	38,5	39,8	41,1	43,0		
11	17,7	19,4	20,9	22,4	23,7	25,0	26,2	27,4	28,5	29,6	30,6	31,6	32,6	33,5	34,5	35,4	37,1	38,7	39,5	41,8	43,3	44,7	46,8		
115	18,4	20,1	21,8	23,3	24,7	26,0	27,3	28,5	29,6	30,8	31,8	32,9	33,9	34,9	35,8	36,8	38,6	40,3	41,1	43,5	45,0	46,5	48,6		
12	19,1	20,9	22,6	24,1	25,6	27,0	28,3	29,6	30,8	31,9	33,1	34,2	35,2	36,2	37,2	38,2	40,0	41,8	42,7	45,2	46,8	48,3	50,5		
125	19,8	21,7	23,4	25,0	26,6	28,0	29,4	30,7	31,9	33,1	34,3	35,4	36,5	37,6	38,6	39,6	41,5	43,4	44,3	46,9	48,5	50,1	52,4		
13	21,2	23,2	25,1	26,8	28,5	30,0	31,5	32,9	34,2	35,5	36,7	37,9	39,1	40,2	41,4	42,4	44,5	46,5	47,4	50,2	52,0	53,7	56,1		
14	22,6	24,8	26,8	28,6	30,4	32,0	33,6	35,1	36,5	37,9	39,2	40,5	41,7	42,9	44,1	45,3	47,5	49,6	50,6	53,5	55,4	57,2	59,9		
15	24,0	26,3	28,4	30,4	32,3	34,0	35,7	37,2	38,8	40,2	41,6	43,0	44,3	45,6	46,9	48,1	50,4	52,7	53,8	56,9	58,9	60,8	63,6		
16	25,5	27,9	30,1	32,2	34,2	36,0	37,8	39,4	41,0	42,6	44,1	45,5	46,9	48,3	49,6	50,9	53,4	55,8	56,9	60,2	62,4	64,4	67,3		
18	29,0	31,8	34,3	36,7	38,9	41,0	43,0	44,9	46,7	48,5	50,2	51,9	53,5	55,0	56,5	58,0	60,8	63,5	64,8	68,6	71,0	73,3	76,7		
20	32,5	35,6	38,5	41,1	43,6	46,0	48,2	50,4	52,4	54,4	56,3	58,2	60,0	61,7	63,4	65,1	68,2	71,3	72,7	77,0	79,7	82,3	86,1		
25	31,2	36,0	40,3	44,2	47,7	51,0	54,1	57,0	59,8	62,4	65,0	67,4	69,8	72,1	74,3	76,5	80,6	84,5	86,4	91,9	95,4	98,7	103,5		

6 MAINTENANCE

Use the special tools provided in the product's tool-kit for pump maintenance, as this will facilitate the maintenance of certain parts. If the special tool-kit is not available, standard tools can be used (screwdrivers, pin punches etc) but take care not to damage the pump's parts.

Follow the instructions below during maintenance or repairs:

- Before starting work, hang a "**MACHINE UNDERGOING MAINTENANCE**" sign in a prominent position
- Before intervening, shut off the supply from the power network, wait until the moving parts have come to a stop and check that these cannot be restarted by other moving parts dragging the shaft. Wait for the surface temperature to drop below 50°C to prevent burns
- Do not use flammable products or materials
- When handling lubricants, wear gloves that are resistant to mineral oils, overalls (trousers must never be tucked into safety shoes) and goggles
- Do not spill any oil or lubricant.

	Maintenance work may only be carried out by authorised, qualified personnel and must be noted in the special log.
	Always comply with the safety instructions in section 3.

The pump's efficiency can be safeguarded by following the preventive maintenance schedule below:

CONTROL	DAILY	WEEKLY	50 H	500 H	1000 H	1500 H
CLEAN FILTERS	X					
OIL LEVEL/CONDITION	X					
OIL/WATER LEAKS	X					
HYDRAULIC SYSTEM		X				
1 ST OIL CHANGE			X			
CHANGE OIL				X		
REPLACE SEALS						X
REPLACE CHECK VALVES					X	

*Each maintenance schedule depends on the type of job that the pump is used for.

The operating cycle, the temperature and the quality of the pumped liquid, the type and quality of the supply and the condition of the accessories used are all fundamental factors that influence the life of pump parts.

If the pump's performance deteriorates, check whether our "**Troubleshooting**" guide describes the source of the problem. If the pump is running without any problems, check it after 1000 hours of operation and then every 500 hours of operation.

After completing any maintenance work, remember to adjust the control / unloader / safety valve and check the condition of the hydraulic system and relative couplings.

After completing any maintenance work, remember to adjust the control / unloader / safety valve and check the condition of the hydraulic system and relative couplings.

6.1 General maintenance

Generally speaking, the following checks must be carried out:

Check the pump is secured properly:

- ✓ Check the screws securing the pump are tight
- ✓ If necessary, tighten the screws using the torque indicated in the installation diagram

Check pipes and couplings:

- ✓ Check for any leaks from the couplings
Leaks can usually be remedied by tightening the couplings properly
Leaks from the couplings on the suction pipes are remedied by repairing the seal
- ✓ Check the condition of the hoses.
Replace the hoses if they look old, damaged, bulging or worn etc.

Check the filter (not supplied by LEUCO):


- ✓ Check the condition of the filter cartridge.
Refer to the filter manufacturer's instructions if the filter cartridge is clogged or damaged in order to restore the original performance of the filter cartridge.

Checking the level of oil:

- ✓ Check the level when the pump is cold and on a level surface
- ✓ Check the amount of oil using the level indicator (located on the rear of the pump body, see section 2.1, letter G).
- ✓ Top up the oil if necessary, as instructed in section 3.7 through the oil plug (located on the top of the pump body, see section 2.1, letter C).



Change the oil:

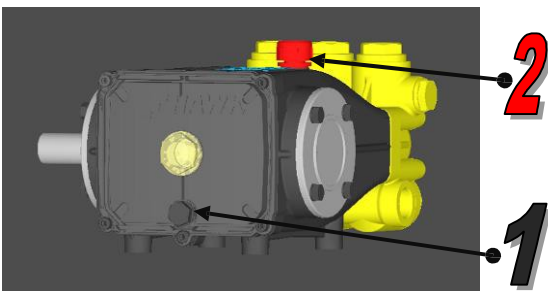- ✓ Put the machine where the pump is fitted on a perfectly level surface with the pump slightly warm. Do not spill any oil. Dispose of oil according to current legal requirements.
- ✓ Have a suitably large container ready for the old oil.
- ✓ Unscrew the drain plug (1) and let all the oil drain out completely.
- ✓ Replace the drain plug.
- ✓ Unscrew the oil plug (letter C, section 2.1 or no. 2 in the illustration below).
- ✓ Pour new oil into the filling hole up to the correct level (as described in the section on "Checking the level of oil").
- ✓ Replace the filling cap.



As regards the **hydraulic motor**:

- Keep the outer surface clean especially in the sealing area of the drive shaft, as abrasive dust can accelerate the wear on the seal and cause leaks
- Replace the filter regularly to avoid contamination of the hydraulic oil.
- The oil level must be checked and the oil replaced periodically depending on the working conditions of the plant .
- The quality of the hydraulic oil used is decisive for the life of the motor. It is advisable to replace it at least once a year;
- Check that the cylindrical or grooved part driving the pump is not abnormally worn;

 	<p>For other maintenance, comply with any other instructions and/or procedures described in the operating manual of the final machine in which the hydraulic motor pump can be inserted.</p>
---	--



 	<p>In the event of any problems, refer to the maintenance plan defined by the manufacturer.</p>
---	--

7 TROUBLESHOOTING

7.1 Troubleshooting

 	<p>Only authorised and qualified personnel may attempt troubleshooting.</p>
---	--

This section suggests some solutions to common problems or malfunctions that may occur. Some of the suggested solutions may be carried out by experienced personnel; others should only be attempted by Authorised Service Centres as they require the use of specific tools as well as detailed knowledge of repairs.

 	<p>Contact the Manufacturer for instructions if any faults are found on the machine or its parts and you are unable to solve the problem.</p>
---	--

PROBLEMS	POSSIBLE CAUSES	SOLUTION
The pump runs but does not produce noise or pressure	The pump is not primed and is running dry	Check if there is water in the suction line Check if the delivery line (gun) is open Check the valves are NOT blocked
The pump runs but is too noisy and/or does not reach the expected pressure	Oversized or worn nozzle Insufficient water supply	Replace the nozzle Clean the filter. Replace the filter with an appropriately sized filter. Eliminate any possible intake of air. Check the size of the suction pipe and replace with a larger diameter pipe, if necessary.
	Pressure control valve is not calibrated or working properly.	Calibrate the valve.
	Worn piston seals	Check the status of the seat of the seal. Replace the seals
The pump comes up to pressure but pulsates and vibrates strongly	Low speed of rotation	Check the motor and the drive
	Foreign matter in the valves	Clean the valves
	Worn valves	Replace the valves

	High inlet water temperature	Reduce the water temperature
	Worn piston seals	Replace the seals
The pump is very noisy	Worn bearings	Replace the bearings
	High inlet water temperature	Reduce the water temperature
	Pump-motor coupling problems	Check the status of the keys, flexible coupling or pulley
Short piston seal life	Cavitation or air in the system	Check the state and size of the suction pipe and replace with a larger diameter pipe, if necessary.
	Damaged ceramic piston	Replace the piston
	Excessive pressure and / or temperature of the pumped water	Check the pressure and the temperature of the inlet water
Water in the oil	Worn plunger – oil shaft seal ring. If the oil is milky (emulsified), but the level does not increase in the crankcase, there is condensation	Replace the ring seal Change the oil more frequently
Water leaking between the crankcase and the manifold housing	Worn seal pack	Replace seal pack
	Worn piston	Replace piston
	Worn piston bolt seal	Replace seal
Oil leaking between the crankcase and the manifold housing	Worn piston - shaft oil seal	Replace the seal
Short bearing life	Pump-motor coupling problems	Check the status of the keys, flexible coupling or pulley
	The oil has not been changed regularly	Change the oil as instructed in the maintenance manual for the pump
	Excessive pressure of the pumped water	Check the pressure
Hydraulic motor drainage oil leaks	Oil seal worn or out of its seat	Replace the oil seal

8 DISMANTLING AND DISPOSAL



Contact the Manufacturer for information and instructions before dismantling the pump in order to move it or for its disposal.

The **hydraulic motor pump** must be demolished by qualified personnel in accordance with current legislation on safety at work. Any parts removed must be separated for recycling according to the type of materials they are made of. Do not dump hazardous waste, including seals and lubricants, into the environment.

Any non-ferrous parts must be disposed of by an authorised company. Any parts made of iron can be recycled or sold. The manufacturer must be notified if the machine is decommissioned or sold



The packing materials can be recycled. Do not throw the packing materials away with normal household waste, but send them for recycling.

The pump contains important raw materials that can be recycled and so they should be sent for recycling to make sure they will be used again.

Do not throw oil away down the drain.

In Italy, electrical/ electronic parts must be delivered to an authority that deals with disposal in accordance with RAEE specifications.



Therefore, dispose of the used **hydraulic motor pump** in approved collection centres.

9 SPARE PARTS

Always use original spare parts (Attachment II).

10 ATTACHMENTS

- I. Declaration of Incorporation
www.hawkpumps.com → [Download](#) → [Technical manuals](#)
- II. Layout
www.hawkpumps.com → [Spare parts](#) → [Select a series or a model](#)
- III. Spare parts
www.hawkpumps.com → [Spare parts](#) → [Select a series or a model](#)